

Perfect coffee at home

Miele coffee machines



Preparation systems



Coffee bean machines

If you like to choose your personal favourite from the coffee beans available in the shops and enjoy the aroma of freshly ground beans then this is the system for you. You can adjust all machine settings to suit your beans and your taste.



Coffee machine based on the Nespresso system

Or would you prefer a capsule system with a convenient choice of 16 fresh coffee specialities? An uncomplicated coffee machine that does the thinking for you and makes cleaning conveniently easy? If this sounds like you, then Miele's Nespresso coffee machine with outstanding technology is the one for you.



Range



Built-in coffee bean machines

These machines fit perfectly into a 45 cm high niche in a tall unit. In combination with other Miele built-in appliances – vertically or horizontally – they create a uniform appearance. A plumbed-in version of the built-in coffee machine is also available.



Freestanding coffee bean machine

Miele's free-standing coffee machine is at home anywhere in your kitchen, living room, conservatory, or wherever you want to enjoy aromatic fresh coffee at the push of a button.



Built-in coffee machine with Nespresso system

This machine can be built into any 35 cm high niche – in a tall unit, wall unit or dresser unit. It can be installed in combination with a 35 cm high Miele steam oven or microwave oven.

Miele highlights for perfect coffee

Built-in coffee bean machines*

OneTouch and OneTouch for Two

Fully-automatic perfection: one or two coffee specialities at the touch of a button. The OneTouch for Two function allows two glasses of latte macchiato or two cups of cappuccino, coffee or espresso to be made at the same time. Using the OneTouch function and pressing the button twice produces two hot drinks in one process, delivered conveniently via the central spout.





AromaticSystem

Intensive coffee aroma: intelligent technology to achieve best possible results.



Exclusive to Miele CupSensor

Perfectly spaced: the unique CupSensor recognises the rim of the cup and alters the position of the central spout accordingly.



Exclusive to Miele EasyClick milk system

Innovative and only available from Miele: the convenient milk system simply clicks into place at the front and is as easily removed.



Exclusive to Miele Automatic rinsing of milk lines with water from the water container

Excellent user convenience: after making coffee with milk, the appliance is automatically rinsed.



Exclusive to Miele ComfortDoor** - patented door system with wide-opening hinged front

Easy access: convenient access to bean container, water container, grounds container and drip tray.

* Features vary depending on model
** DE 19701033C2 EP 0783859B1

Miele highlights* for perfect coffee

The freestanding coffee bean machine



AromaticSystem

Intensive coffee aroma: intelligent technology to achieve best possible results.



Automatic rinsing of milk lines with water from the water container

Excellent user convenience: after making coffee with milk, the appliance is automatically rinsed.



Cappuccinatore

Minimum effort required: hot milk or creamy milk froth is delivered straight to the cup, glass or coffee pot.



Easily removable brew unit

Easy to remove and clean: for impeccable hygiene, longevity and perfect coffee enjoyment.



ComfortClean

Thorough cleaning: many components are dishwasher-proof.



* Features vary depending on model



OneTouch and OneTouch for Two

Fully-automatic perfection: one or two coffee specialities at the touch of a button. The OneTouch for Two function allows two glasses of latte macchiato or two cups of cappuccino, coffee or espresso to be made at the same time. Using the OneTouch function and pressing the button twice produces two hot drinks in one process, delivered conveniently via the central spout.

Miele highlights for perfect coffee

Built-in coffee machine with Nespresso system



Cappuccinatore


Minimum effort required: hot milk or creamy milk froth is delivered straight to the cup, glass or coffee pot.



Exclusive to Miele

Capsule carousel

Select your favourite coffee from up to five Nespresso types at the touch of a button: the unique electronic carousel has room for 20 capsules in 5 hoppers.

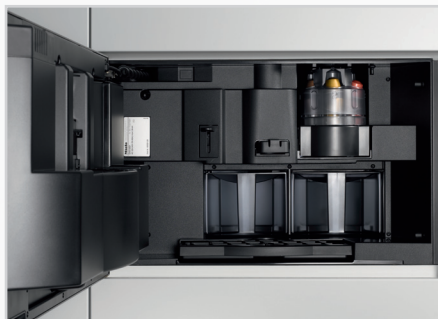

Exclusive to Miele

ComfortDoor* - patented door system with wide-opening hinged front

Easy access: convenient access to bean container, water container, waste container and drip tray.



ComfortClean

Thorough cleaning: many components are dishwasher-proof.



User profiles

Your choice: up to 10 individual user profiles for your personal coffee experience.





**Exclusive
to Miele**

**Built-in coffee machines with Nespresso
system**

Perfect coffee to suit all tastes: 16 different types of coffee are easy to make.

Coffee machines

Product overview



Model number	CM 6100	CM 6300	CVA 6431
Type of appliance			
Freestanding bean machine	●	●	-
Built-in bean machine/Nespresso system	-/-	-/-	-/●
Design			
Display	DirectSensor	DirectSensor	DirectSensor
Beverages			
Espresso/Coffee/Long coffee	●/●/●	●/●/●	●/●/●
Cappuccino/Latte macchiato/Caffè latte	●/●/●	●/●/●	●/-/-
Hot water/Hot milk/Milk froth	-/●/●	●/●/●	-/●/●
Gourmet advantages			
OneTouch/OneTouch for Two	●/●	●/●	●/-
Aromatic bean grinding system	●	●	-
Ready ground coffee option	●	●	-
Programmable grinder setting/amount of coffee	●/●	●/●	-/-
Programmable user profiles	-	4	●
Programmable amount of water/water temperature	●/●	●/●	●/-
Programmable amount of milk/milk froth	●/●	●/●	-/-
Pre-brewing/Coffee pot function	●/-	●/-	-/-
Convenience features			
Choice of operating language	●	●	●
Clock display/Date display	●/-	●/-	●/●
CupSensor	-	-	-
Height adjustable spouts in cm	8.0 – 14.0	8.0 – 14.0	9.0
Heated cup surface	-	●	-
ComfortDoor/Concealed handle/BrilliantLight	-/-/-	-/-/●	●/●/●
Removable bean container/Nespresso capsule carousel	-/-	-/-	-/●
Coffee bean capacity in g	300	300	-
Capsule capacity in carousel	-	-	20
Waste container capacity (portions)	14	10	15
Water container capacity in l	1.8	1.8	1.5
Programmable on and off times	●	●	●
Stand-by time programmable/clock buffer	●/-	●/-	●/-
Optional connection to warming drawer	-	-	-
Mains water connection	-	-	-
Easy maintenance			
Easy to use cleaning programmes/ComfortClean	●/●	●/●	●/●
Automatic rinsing	●	●	●
Removable milk pipework/brew unit	●/●	●/●	-/-
Efficiency and sustainability			
Energy saving Eco Mode option	●	●	●
Safety			
System lock	●	●	●
Technical data			
Niche dimensions in a tall unit in mm (W x H x D)*	251 x 359 x 427	251 x 359 x 427	560 – 568 x 360 – 362 x 310
Total connected load in kW/Voltage in V/Fuse rating in A	1.5/220 – 240/13	1.5/220 – 240/13	2.8/220 – 240/13
Length of mains inlet hose in m/mains electrical cable in m	-/1.4	-/1.4	-/2.0
Accessories supplied			
EasyClick glass milk flask/Cappuccinatore	-/-	-/-	-/●
Descaling agent/Cleaning tablets	●/●	●/●	●/●
Stainless steel thermal milk flask	-	●	-
Coffee spoon for ground coffee	●	●	-
Colours			
CleanSteel	-	-	●
Obsidian Black	●	●	-
Brilliant White	-	-	-
Havana Brown	-	-	-



* Please refer to the building-in diagrams for niche dimensions for building in with different appliances and units. Appliance dimensions are quoted for CM 6100 and CM 6300.

N.B.: Appliances must be installed in accordance with IEE regulations by a competent person.



Model number	CVA 6401	CVA 6800	CVA 6805
Type of appliance			
Freestanding bean machine	–	–	–
Built-in bean machine/Nespresso system	●/–	●/–	●/–
Design			
Display	DirectSensor	M Touch	M Touch
Beverages			
Espresso/Coffee/Long coffee	●/●/●	●/●/●	●/●/●
Cappuccino/Latte macchiato/Caffè latte	●/●/●	●/●/●	●/●/●
Hot water/Hot milk/Milk froth	●/●/●	●/●/●	●/●/●
Gourmet advantages			
OneTouch/OneTouch for Two	●/●	●/●	●/●
Aromatic bean grinding system	●	●	●
Ready ground coffee option	●	●	●
Programmable grinder setting/amount of coffee	●/●	●/●	●/●
Programmable user profiles	●	●	●
Programmable amount of water/water temperature	●/●	●/●	●/●
Programmable amount of milk/milk froth	●/●	●/●	●/●
Pre-brewing/Coffee pot function	●/●	●/●	●/●
Convenience features			
Choice of operating language	●	●	●
Clock display/Date display	●/●	●/●	●/●
CupSensor	–	●	●
Height adjustable spouts in cm	8.5 – 16.5	Automatic	Automatic
Heated cup surface	–	–	–
ComfortDoor/Concealed handle/BrilliantLight	●/●/●	●/●/●	●/●/●
Removable bean container/Nespresso capsule carousel	●/–	●/–	●/–
Coffee bean capacity in g	500	500	500
Capsule capacity in carousel	–	–	–
Waste container capacity (portions)	15	15	15
Water container capacity in l	2.3	2.3	2.3
Programmable on and off times	●	●	●
Stand-by time programmable/clock buffer	●/●	●/●	●/●
Optional connection to warming drawer	–	●	●
Mains water connection	–	–	●
Easy maintenance			
Easy to use cleaning programmes/ComfortClean	●/●	●/●	●/●
Automatic rinsing	●	●	●
Removable milk pipework/brew unit	●/●	●/●	●/●
Efficiency and sustainability			
Energy saving Eco Mode option	●	●	●
Safety			
System lock	●	●	●
Technical data			
Niche dimensions in a tall unit in mm (W x H x D)*	560 – 568 x 450 – 452 x 500	560 – 568 x 450 – 452 x 500	560 – 568 x 450 – 452 x 500
Total connected load in kW/Voltage in V/Fuse rating in A	2.8/220 – 240/13	3.5/220 – 240/13	3.5/220 – 240/13
Length of mains inlet hose in m/mains electrical cable in m	–/2.0	–/2.0	1.5/2.0
Accessories supplied			
EasyClick glass milk flask/Cappuccinatore	●/–	●/–	●/–
Descaling agent/Cleaning tablets	●/●	●/●	●/●
Stainless steel thermal milk flask	–	–	–
Coffee spoon for ground coffee	●	–	–
Colours			
CleanSteel	●	●	●
Obsidian Black	●	–	●
Brilliant White	●	–	●
Havana Brown	●	–	●

* Please refer to the building-in diagrams for niche dimensions for building in with different appliances and units. Appliance dimensions are quoted for CM 6100 and CM 6300.

N.B.: Appliances must be installed in accordance with IEE regulations by a competent person.

