

## INSTRUCTIONS ON USE



Date \_\_\_\_\_

Scope and Activities:

Signature \_\_\_\_\_

### DESIGNATION OF HAZARDOUS SUBSTANCE

## ProCare Tex 20 OB

### RISKS TO HUMANS AND ENVIRONMENT



Causes serious damage to the eyes. Causes skin irritation.  
May irritate respiratory system. Noxious when ingested.  
Risk of pressure buildup and danger of bursting as a result of decomposition in sealed containers and pipework.



### PROTECTIVE MEASURES AND CODE OF CONDUCT



Wear safety goggles and protective gloves during work.  
Avoid direct contact with skin and clothing.  
Take off soiled or saturated items of clothing immediately. In the event of skin contact, rinse liberally with water.  
Take preventative skin protection measures.  
Avoid splashes when refilling canisters. Keep containers sealed tightly until used.  
Protect against direct sunlight and heat.




### CONDUCT IN EVENT OF RISK

### Emergency call




Measures in event of unintentional release of substances:  
Clear and cordon off danger zone. Inform superior immediately.  
In the presence of vapours, wear a full breathing mask with combination filter. Ensure good ventilation.

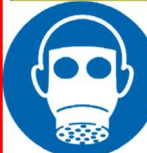

Risk of slipping in danger zone. Warn employees in area.  
Contain liquid spillages with an absorbent binding agent (sand, vermiculite, diatomaceous earth) and place in a designated container for disposal as hazardous waste. Rinse off residuals with copious amounts of water.  
In the event of a fire: Act in accordance with corporate fire safety regulations.

### FIRST AID

### Emergency call

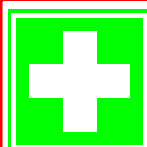

**Skin contact:** Remove contaminated clothing immediately and rinse affected skin liberally with water. In the event of large-scale skin contact, use emergency shower, call for medical help as appropriate.  
**Eye contact:** Rinse eyes under running water with eye-lids open for at least 10 minutes (protect unaffected eye, remove contact lenses). Consult a physician.  
**Ingestion:** If person is conscious, immediately rinse mouth with water, drink large amounts of water. Do NOT induce vomiting, seek medical treatment.  
**Inhalation:** Ensure ample fresh air, keep calm, half-upright position, loosen clothing. Assistance in event of breathing difficulties. If effects are severe, call doctor.

### APPROPRIATE DISPOSAL



Must be treated as hazardous waste in accordance with valid regulations.  
Return empty containers to warehouse.

This draft must be extended to include workplace-specific provisions and be signed by the employer.